



---

## Door Separation Procedure

---

### Issue:


When performing periodic inspections and coupled horizontal single slide doors are involved, the following procedure should be used where separation of the landing and car doors occurs in normal operation.

### Procedure for Testing Door Separation:


1. Both car and landing door to be open.
2. Facing open doors, obstruct the landing door during the second 3<sup>rd</sup> of closing at the leading edge of the door by stalling the doors as with door pressure verification.
3. As the doors are closing they will come to a controlled stop.  
If the car door keeps closing, separation has occurred and the following direction shall be issued.

### Direction:

Adjust the door closing mechanism to prevent doors from separating when closing @ floor # \_\_ (door clutch).

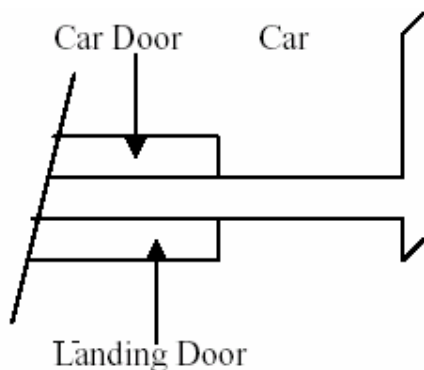

Hall Landing

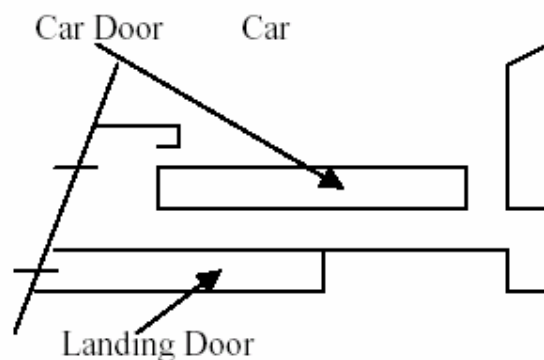

Hall Landing

### Supporting Documentation

N/A

### Special Note

N/A